

OMET

SWR001

COMET Rxxxx Sxxxx Gxxxx Dxxxx ZV



COMET COMET

Android COMET



□□□□

GENERAL FEATURES	
Technical support	Ano
Languages in program	Ano
PROGRAM SETTINGS	
Communication settings (basic settings)	Ano
Data presentation (basic settings)	Ano
Communication settings (extended settings)	Ano
Data presentation (extended settings)	Ano
Data storing (Folders and files settings)	Ano
M2M connection settings	Ano
Autodownload	Ano
DATA HANDLING	
Download record from the data logger	Ano
Open record from the file	Ano
Show data into the table	Ano
Data export to DBF (basic export)	Ano
Data export to XLS (basic export)	Ano
Data export to DBF (extended options)	Ano
Data export to XLS (extended options)	Ano
Print data from the table (basic print)	Ano
Print data from the table (extended options)	Ano
Statistics	Ano
GRAPHICS	
Simple graph	Ano
Graph	Ano
Simple graph print	Ano
Graph print	Ano

Graph export to PDF	Ano
DATALOGGER HANDLING	
Datalogger configuration	Ano
Datalogger memory erase	Ano
Battery exchange	Ano
Save configuration to the file	Ano
Read configuration from the file	Ano
COMET DATABASE	
Data export to the COMET Database	Ano
Data download with export to the COMET Database	Ano
Autodownload with export to the COMET Database	Ano